



AD289 Instruction Diagram / Aufbauanleitung Abbräuwagen CLAIRE 399-1040

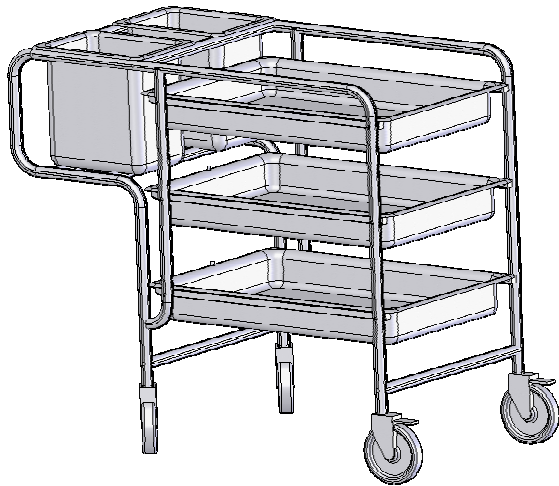


NO.	NAME	SPECIFICATION	QUANTITY
1	Side Frame	Φ25	2
2	Connecting Tube	Φ25	4
3	U-Shape Frame	20*20	3
4	Cross Tube	Φ19	2
5	Screw	M8*50	8
6		M6*40	12
7	Wheel	Universal Brakes	2
8		Universal	2
9	Plastic Pan	72*51*16	3
10	Plastic Bucket	37*27*38	2

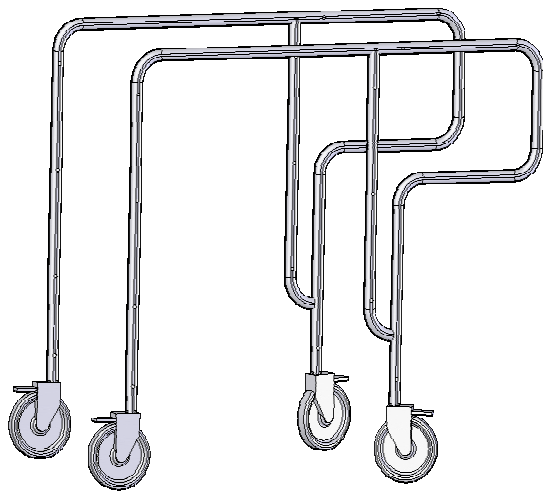

1. Fix the wheels to side frames.

1. Räder (7+8) unten in die Gestellteile (1) eindrehen.

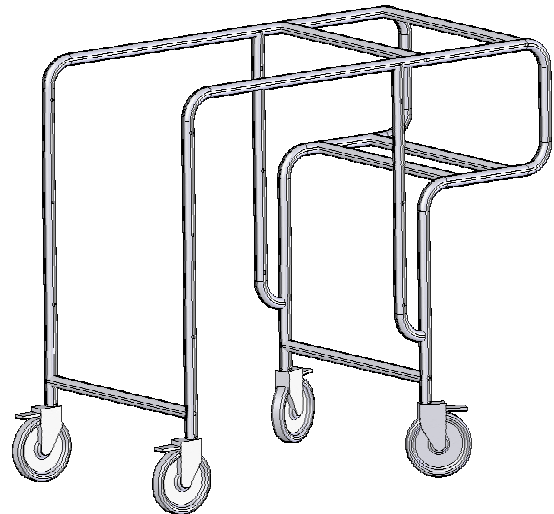


2. Fix the connecting tube to side frames with screws, and put the cross tubes into holes.

2. Erst die unteren 2 Querstangen (2) in das Gestell (1) einschrauben (5), die zwei mittigen Querstangen (4) einsetzen (ohne Schrauben!), die oberen zwei Querstangen (2) einschrauben (5), alle Schrauben mit dem beiliegenden Inbusschlüssel festziehen.



3. Fix the U-shape frames to side frames with screws.

3. Die U-Profile (3) in das Gestell (1) einschrauben (6) und festziehen.

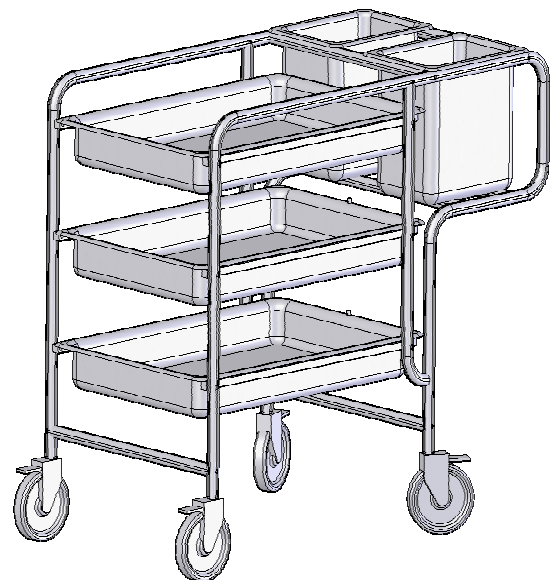

4. Put the plastic buckets and pans in correct position.

4. Einsetzen der Kunststoffbehälter (9+10)